



The world's most efficient fluorescent lighting

MASTER TL5 High Efficiency Eco

This extremely efficient TL5 lamp (tube diameter 16 mm) saves considerable energy by simple lamp-for-lamp replacement. The TL5 HE Eco lamp offers excellent lumen maintenance and colour rendering. Application areas vary from offices and industry to schools and retail environments.

Benefits

- Up to 10 % energy saving with simply changing the lamp
- The same quality of light as compared with MASTER TL5 HE lamps
- All benefits of regular TL5 lamps

Features

- High lamp efficacies up to 114 lm/W
- Up to 10% power reduction in comparison with standard MASTER TL5 HE lamps
- Fluorescent Super 80 light quality

Application


- Ideally suited for recessed, surface-mounted and suspended luminaires e.g. in offices, shops, schools, public buildings and industry (low ceiling), wherever high-quality, energy-efficient lighting is required

Warnings and Safety

- A reduction in energy consumption is only achieved with current-controlled gear.
- The lamps operate perfectly with power-controlled gear, but in that case the light output can be up to 10% higher.
- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.

MASTER TL5 High Efficiency Eco

Dimensional drawing

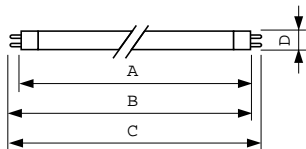

Product	D (max)	A (max)	B (max)	B (min)	C (max)
MASTER TL5 HE Eco 25=28W/840 UNP/40	17 mm	1149.0 mm	1156.1 mm	1153.7 mm	1163.2 mm

