



ZXP399 DMX Controls and Accessories

ZXP399 endcap female connector (20 pcs)

Black -

The ZXP399 DMX Controls and Wiring Accessories are to be used with our architectural and facade lighting luminaires (UniFlood C, M and G, UniStrip G4, UniEdge, UniDot G2, UniString and UniBar).;DMX Controls include a main controller, stand-alone controller, sub-controllers, DMX amplifier and DMX addressing device.;Main Controller: Industrial computer that can control up to 6,000 DMX universes.;Stand-alone Controller: Fits all medium applications with up to 700 DMX universes.;Wiring accessories include leader and jump cables with male and female IP67 connectors and end-caps.;Addressing Device: Hand-held device that can write DMX addresses to a whole run on-site within minutes.;DMX Amplifier: Compact, IP65 and low-power repeater that can amplify the DMX signal for up 100 metres.

Product data


General Information	
Colour	Black

Mechanical and Housing	
Overall length	37.1 mm
Overall width	17 mm
Overall height	17 mm
Dimensions (height x width x depth)	17 x 17 x 37 mm (0.7 x 0.7 x 1.5 in)

Product Data	
Full product code	871951494525800
Order product name	ZXP399 endcap female connector (20 pcs)
EAN/UPC – product	8719514945258
Order code	911401742412
SAP numerator – quantity per pack	1
Numerator – packs per outer box	1
SAP material	911401742412
SAP net weight (piece)	0.160 kg

ZXP399 DMX Controls and Accessories

Dimensional drawing

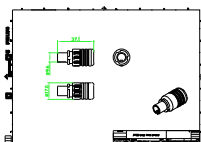

ZXP399 endcap female connector (20 pcs)

