



# MASTERColour CDM-R111 Elite

## MASTERColour CDM-R111 Elite CDM-R111 Elite 70W/930 GX8.5 40D

MASTERColour CDM-R111 Elite combines the trendy look of 111 mm aluminium-reflector halogen lamps with the long life, high energy efficiency and crisp white light of MASTERColour CDM.

### Warnings and Safety

- Control gear must include end-of-life protection (IEC61167, IEC 62035)
- Use only with electronic control gear. 35W/930 lamps may also use electromagnetic gear.
- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.

### Product data

General Information			
Cap base	GX8.5 [ GX8.5]	Technical Beam Angle (Nom)	40 °
Burning Position	UNIVERSAL [ Any/Universal]	Beam angle technical	38 °
Life to 5% failures (nom.)	8000 h	Beam angle technical	47 °
Life to 10% failures (nom.)	9500 h	Beam angle technical	29 °
Life to 20% failures (nom.)	10500 h	Lamp Luminous Flux 25°C EL (Nom)	3550 lm
Life to 50% failures (nom.)	12000 h	Luminous intensity (min.)	6500 cd
ANSI code HID	-	Luminous intensity (nom.)	8500 cd
Switching cycle	1,050X	Beam description	Flood [ Flood]
	Narrow Cone	Colour Designation	Warm white (WW)
		Lumen maintenance 12,000 hours (nom.)	70 %
		Lumen maintenance 2,000 hours (nom.)	90 %
		Lumen maintenance 4,000 hours (nom.)	85 %
		Design mean lumens	3100 lm

### Light Technical

Colour Code	930 [ CCT of 3,000 K]
-------------	-----------------------

# MASTERCcolour CDM-R111 Elite

Chromaticity coordinate X (nom.)	0.434
Chromaticity coordinate Y (nom.)	0.398
Colour Temperature, horizontal (Nom)	3000 K
Lamp Luminous Efficacy EM (Nom)	50 lm/W
Colour Rendering Index,horiz (Min)	89
Colour Rendering Index,horiz (Nom)	92
LLMF at end of nominal lifetime (nom.)	70 %
Luminous flux in 90° cone (rated)	3550 lm

## Operating and Electrical

Power (Rated) (Nom)	73.2 W
Re-ignition time (min.) (max.)	15 min
Warm-up time to 60% light (nom.)	120 s
Ignition time (max.)	30 s
Voltage (Max)	98 V
Voltage (Min)	80 V
Voltage (Nom)	89 V


## Controls and Dimming

Dimmable	No
Run-up time 90% (max.)	3 min

## Mechanical and Housing

Lamp Finish	Reflector
-------------	-----------

## Dimensional drawing

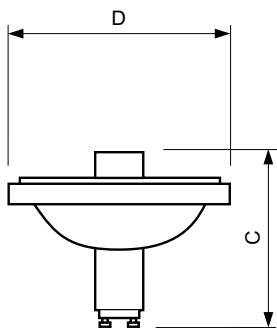

CDM-R111 Elite 70W/930 40D

Bulb shape	R111 [ R 111mm]
------------	-----------------

## Approval and Application

Energy Efficiency Class	G
Mercury (Hg) content (max.)	6.6 mg
Mercury (Hg) content (nom.)	6.6 mg
Energy consumption kWh/1,000 hours	74 kWh
	473284

## Product Data

Full product code	871829168978200
Order product name	MASTERCcolour CDM-R111 Elite CDM-R111 Elite 70W/930 GX8.5 40D
EAN/UPC – product	8718291689782
Order code	928195805330
SAP numerator – quantity per pack	1
Numerator – packs per outer box	6
SAP material	928195805330
SAP net weight (piece)	96.000 g
ILCOS code	MRS/UB-70/930-H-GX8.5-111/88/40

Product	D (max)	C (max)
MASTERCcolour CDM-R111 Elite CDM-R111 Elite 70W/930 GX8.5 40D	111 mm	95 mm

# MASTERCoulour CDM-R111 Elite

## Photometric data

